



Specs: 26.29Specs23


Waterproofing and sealing

Bunded concrete, masonry & blockwork surfaces

Products required

- **RED POWERCLEAN**
- **MAXPLUG** or **MAXREST**
- **MAXJOINT ELASTIC**
- **MAXSEAL FLEX** or **MAXSEALFLEX "M"**
- **MAXMESH**

1. Prepare area to be treated by removing any loose materials ensuring a clean and sound surface.
2. Any damage to the surface, missing mortar lines, should be repaired using **MAXPLUG** or **MAXREST**.
3. Thoroughly clean the area using **RED POWERCLEAN** to remove all contamination (oils, grease)
4. Wet the entire surface before applying **MAXSEAL FLEX** coating by brush. Allow to cure overnight, wet area and apply second coat.
5. A coving should be placed in all corner joints using **MAXREST**.
6. **MAXJOINT ELASTIC** and **MESH**, to be used on joints to provide added strength. Incorporate the **MAXMESH** into the first coat of **MAXSEALFLEX**.
7. Seal joints using **MAXJOINT ELASTIC**.

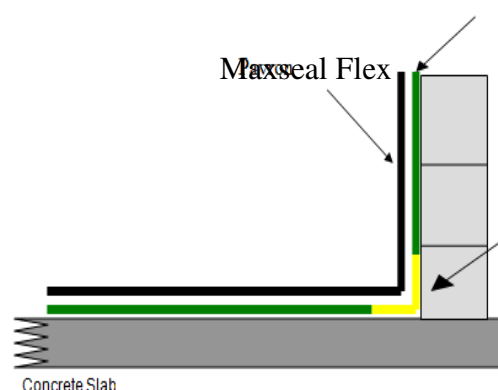

WATERPROOFING WITH OILS AND FUELS RESISTANT

Note – This information is based on information from the manufacturer and from our own experience. The information contained in this specification should be used in conjunction with the appropriate technical data bulletins and material safety data sheets available from our office or website.

© Scientific Waterproofing Products Pty Ltd. ABN: 155 659 948 All rights reserved.

Address: Unit 4/92 Bryant Street, Padstow, NSW 2211, AUSTRALIA

Tel: +61 2 9771 0011 Email: admin@swppl.com.au

National Hotline: 1300 303 301 <http://swppl.com.au/>

